


HOW TO CLEAN DIESEL STEAM CLEANER BOILER

1. Choose your descaling product and check the correct dilution
2. Make sure the machine is completely empty from water and make sure pressure is 0.
3. Remove the steam hoses. Machine must be without steam hoses
4. Fill the water tank of the machine with water and descaling product.
5. Switch the machine on (but do not start it)



6. Make sure the cleaning switch is on “on” position

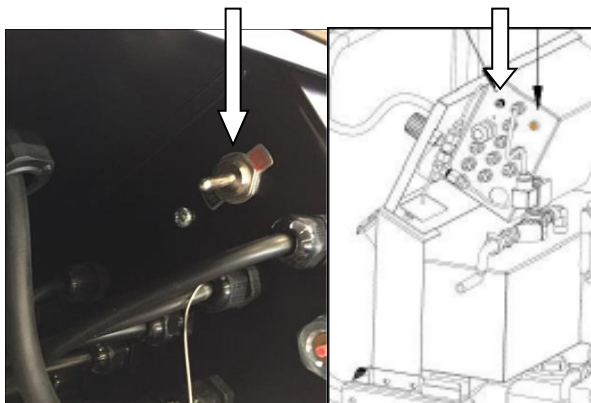

7. Open the electrovalves from the bottoms of the main panel (left and right). In case of Astra Steamer open the relevant taps in the back of the unit.



8. The machine will start charging water and descaling products.
Boiler will be soon full of the liquid mixture
9. When the water will come outside the steam outlets (electrovalves), stop the machine
The machine is now full of water and descaling.
Wait half an hour or an hour (accordingly to the instructions of the descaling product).
10. Empty the boiler opening the discharging tap placed in the back of the machine.



11. Keep the electrovalves open
12. Empty the machine water tank
13. Move the cleaning switch to “off” position
14. Machine is still off
15. When boiler and water tank are completely empty, close the discharging tap in the back of the machine
16. Connect the machine to the water main
17. Switch the machine on
18. Put the cleaning switch on “on” position
19. Open the electrovalves without the steam hoses
20. Let the fresh water coming outside
21. Continue this operation for 10 minutes
22. Switch the machine off
23. Put the cleaning switch on “off” position
24. Open the discharging tap and let the water coming outside completely.

The machine is now ready to start its regular work.